3. Exterior Cover Removal

Disconnect the power supply from the machine and remove the cover.

> Front cover: ..... Remove the Drum first.
> Master removal upper cover: ..... Remove the Original stopper first.

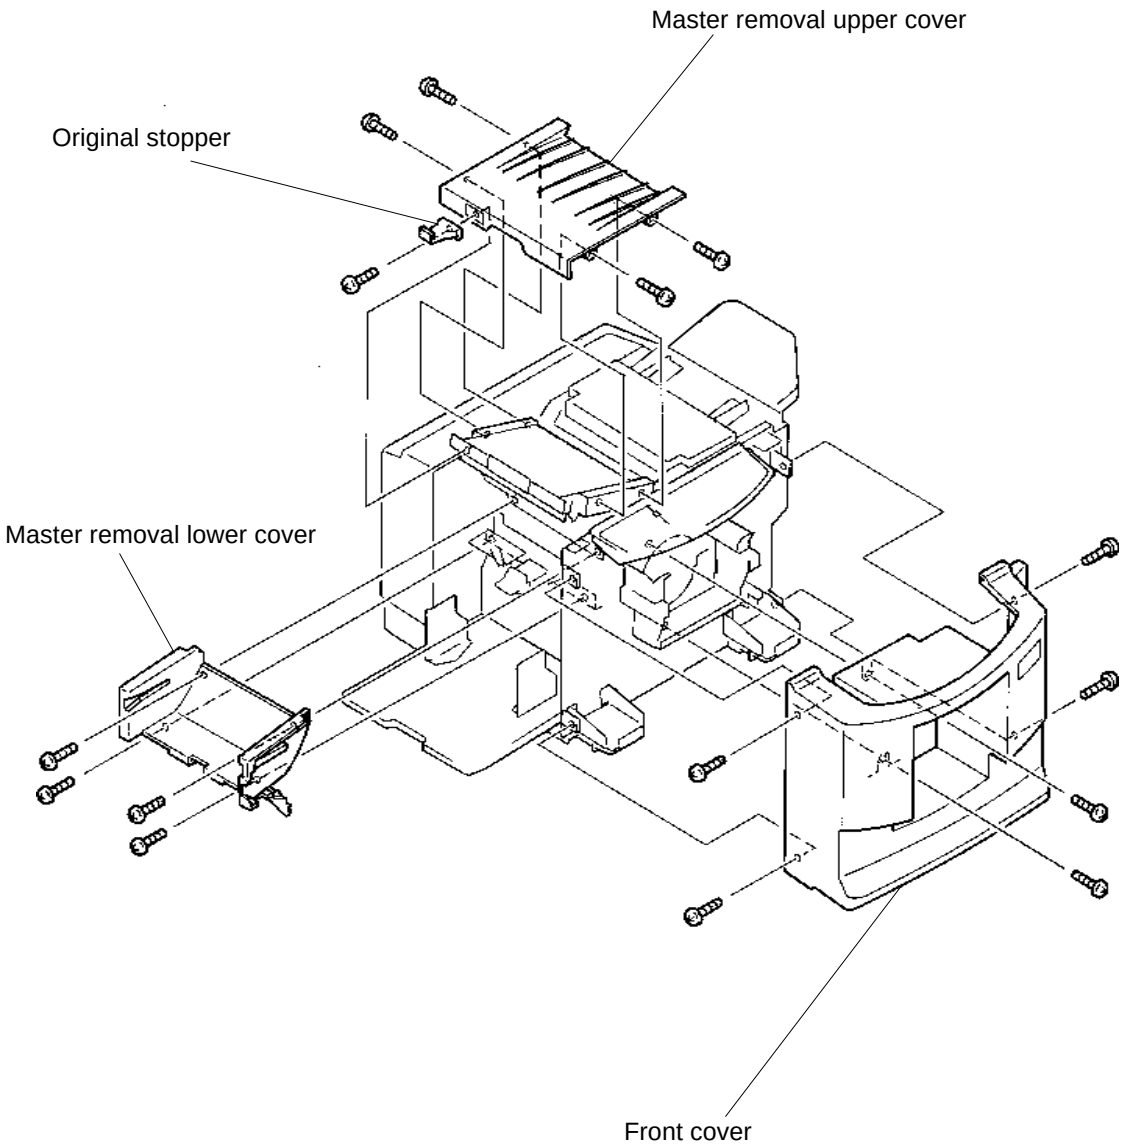

> Back cover
> ADF cover: ..... Open the ADF unit first.
> ADF unit cover: ..... Open the ADF unit and remove the ADF cover first.
> Master making unit cover

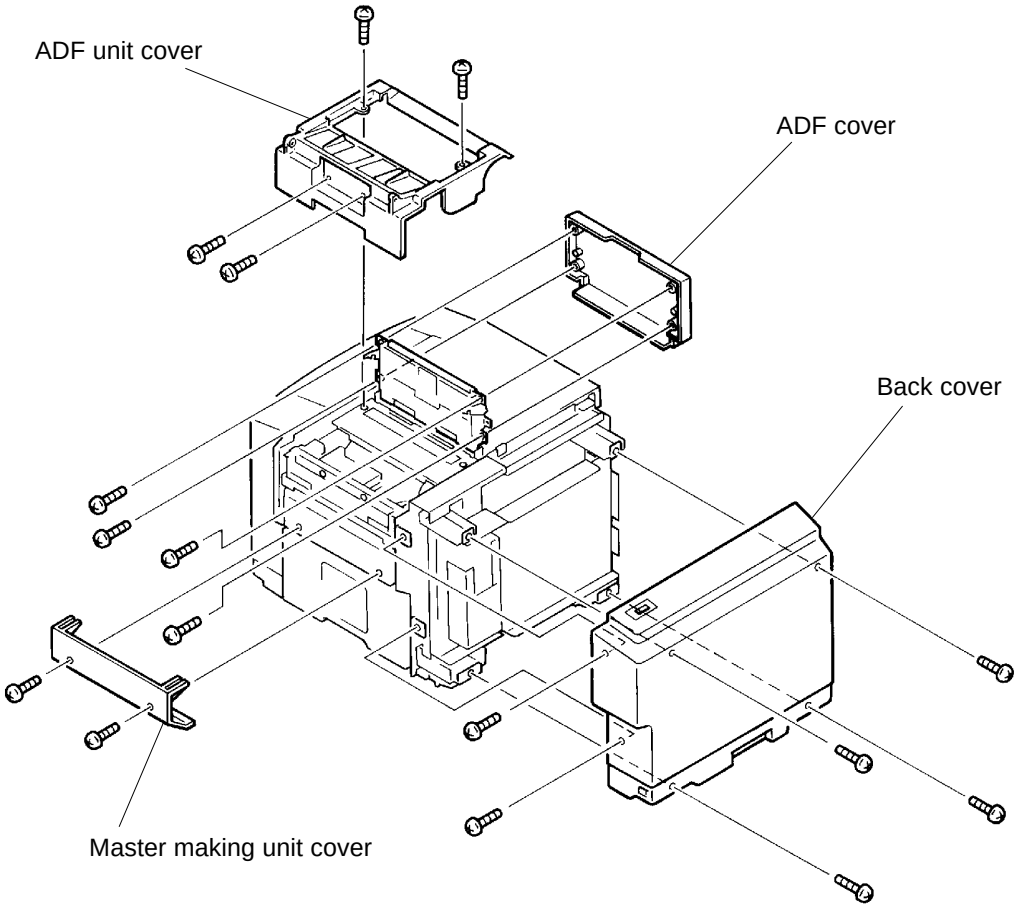
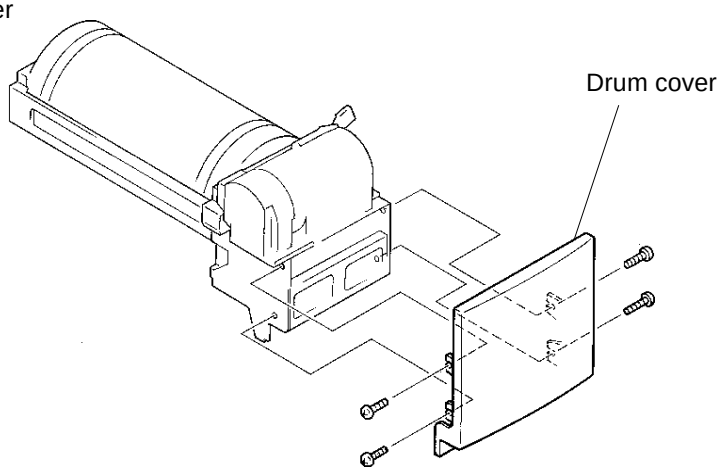
> Drum cover